


Controller Introduction

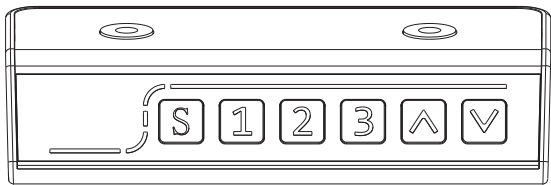

Short press the button,the display flashes,Press any of memory key to save the height.



Memory button: Press the 1 2 3 button and the desk will move to the height that was previously set for the button.



Press the button to raise the desk. Releasing the button stops the process. The maximum height of the desk is 118 cm.



Press the button to lower the desk. Releasing the button stops the process. The minimum height of mthe desk is 72 cm.


Reset

Press and hold the button for 5 seconds, and the screen will show'RES'. Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes	
Hot	Overheat protection: When the motor operates continuously,it will stop running to prevent damage caused by overheating. Wait for a period of time (15-20minutes) before making any further height adjustments.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E60	Unequal Leg Height Warning: Check whether all the legs are at the same height. If necessary, adjust it by following the reset instructions.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

Engineering Mode	
ChangeDisplayed Unit(Un)	Long press the button, "S--"shows and flashes. Press button again and the display shows "Un". Press button to select. Press up or down to switch between "SI"(metric) or "In"(imperial). Press button to save your choice.
CollisionForce Detection(CF)	Long press the button, "S--"shows and flashes. Press button again and the display shows "Un". Press up or down to switch to "CF". Press button to select. Press up or down to switch between "OFF",Low(L), Normal(n) or Heavy(H) collision force detection. Press button to save your choice.

Desk Assembly Instruction

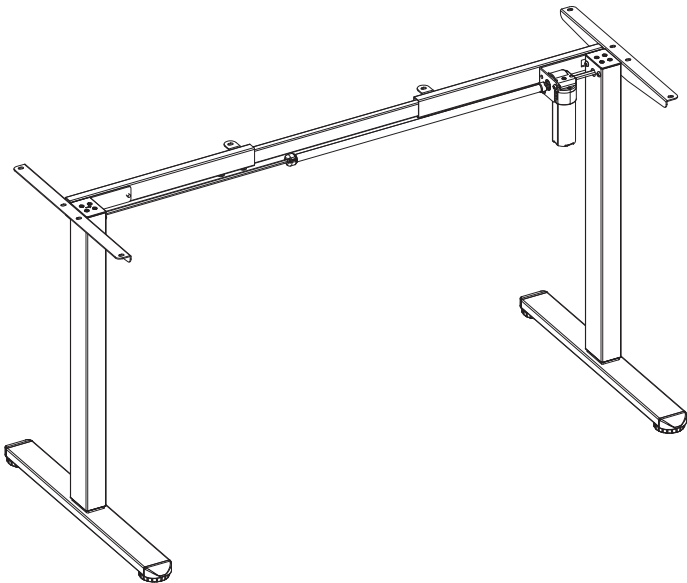

Gaming Table - Agr Lite Frame

Power Input
100V-240V

Speed
20 mm/s

Motion Noise
<55dB

Load Capability
154 lbs / 70 kg


Overload
Protection

Operation Temperature
-20°C--+50°C

Thermal
Protection


IP Grade
IP20

COMPONENT LIST

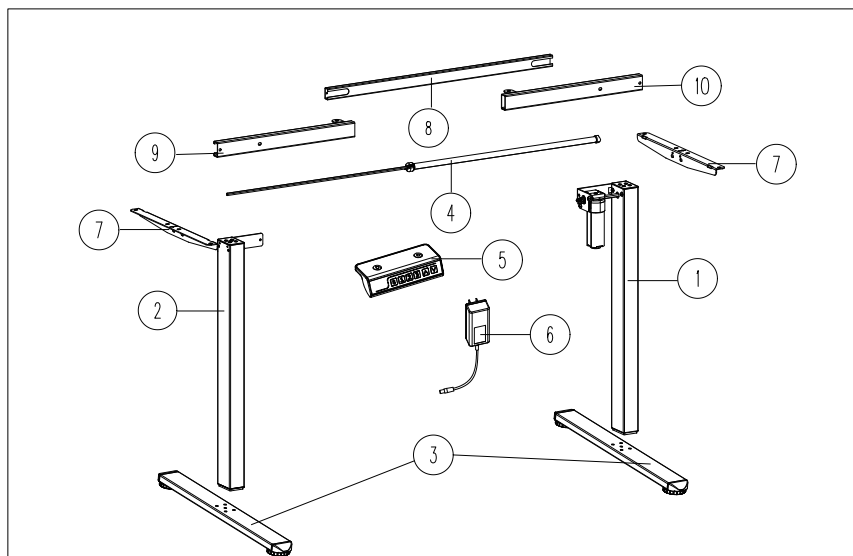


<p>Right Table Leg (x1)</p>	<p>Left Table Leg (x1)</p>	<p>Leg Base (x2)</p>
<p>Transmission rod (x1)</p>	<p>Controller (x1)</p>	<p>Power (x1)</p>
<p>Side Plate (x2)</p>	<p>Connector (x1)</p>	<p>Left Crossbar (x1)</p>
<p>Right Crossbar (x1)</p>		

Step 5

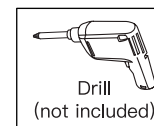


B	M5×15mm(x4)
H	Headphone hanger (x2)

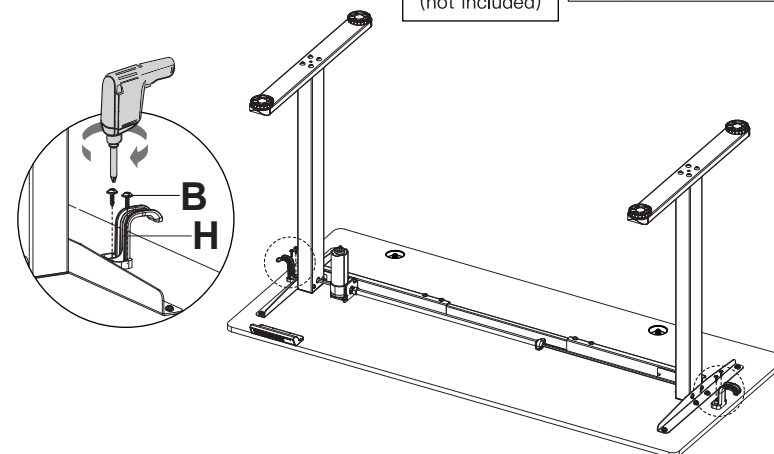



Step 6



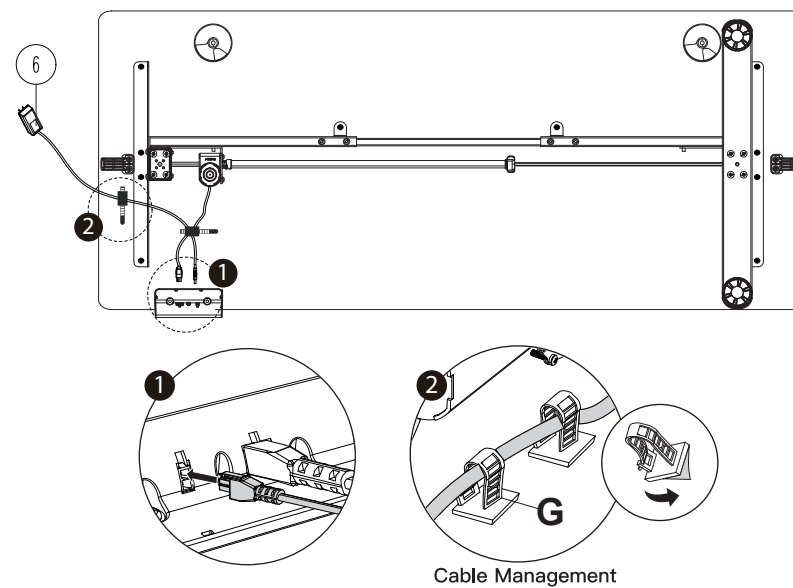
G	Cable Clip (x2)
---	-----------------





Step 4

Note: The tabletop not included.


 
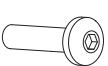
 


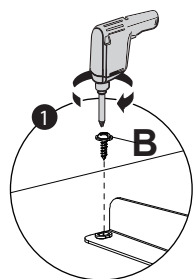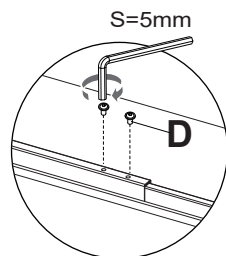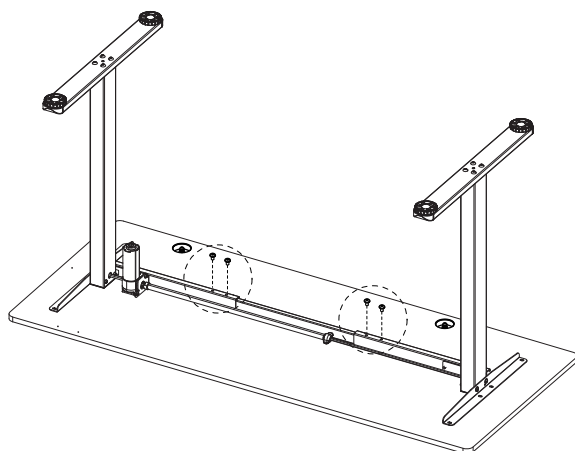
 
D	 M6×12mm(x4)
F	 S=5mm

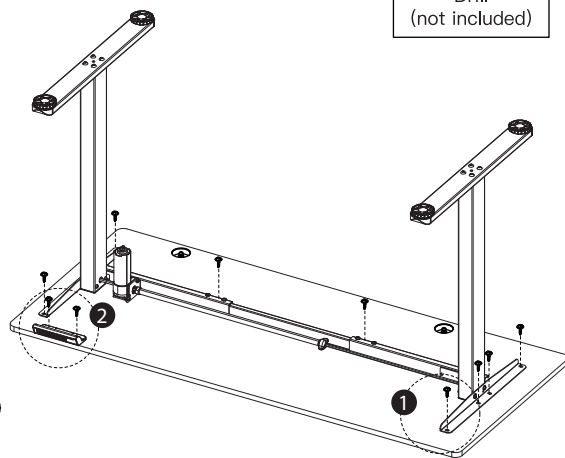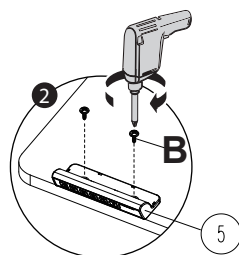

 

 
 
B	 M5×15mm(x12)
---	--




HARDWARE LIST

A  Screws M6×8mm (x8)	B  Screws M5×15mm (x16)	C  Screws M6×35mm (x8)
D  Screws M6×12mm (x4)	E  Allen Key S=2mm (x1)	F  Allen Key S=5mm (x1)
G  Cable Clip (x2)	H  Headphone hanger (x2)	



Spare Parts

			
A	B	C	D
M6×8mm (x2)	M5×15mm (x2)	M6×35mm (x1)	M6×12mm (x1)



Step 1

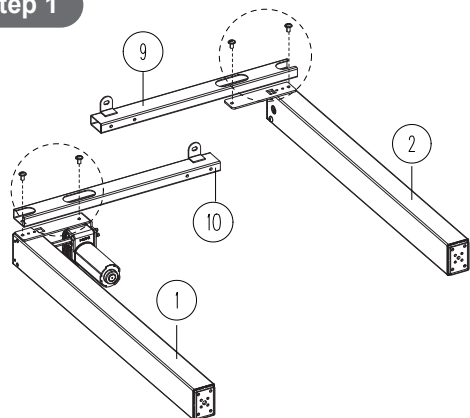


A	M6×8mm(x4)
F	S=5mm

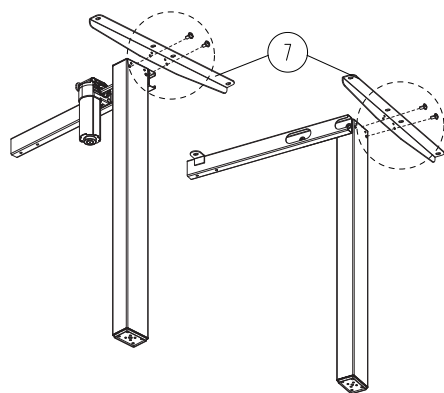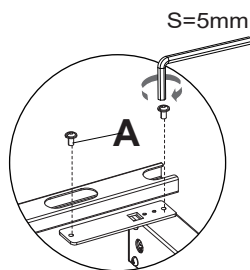


A	M6×8mm(x4)
F	S=5mm

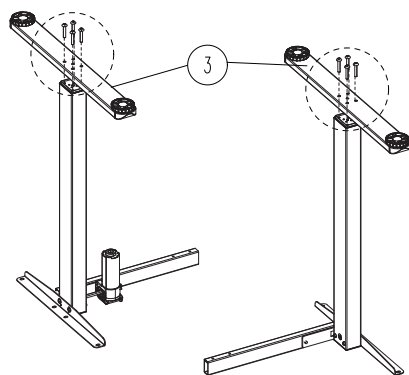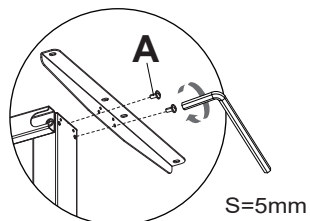


C	M6×35mm(x8)
F	S=5mm

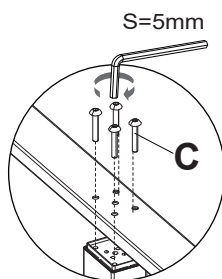

Step 2

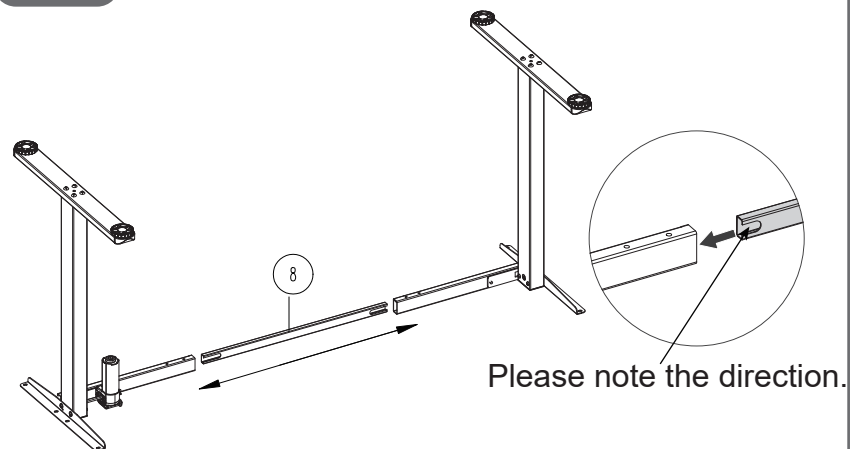

Step 3

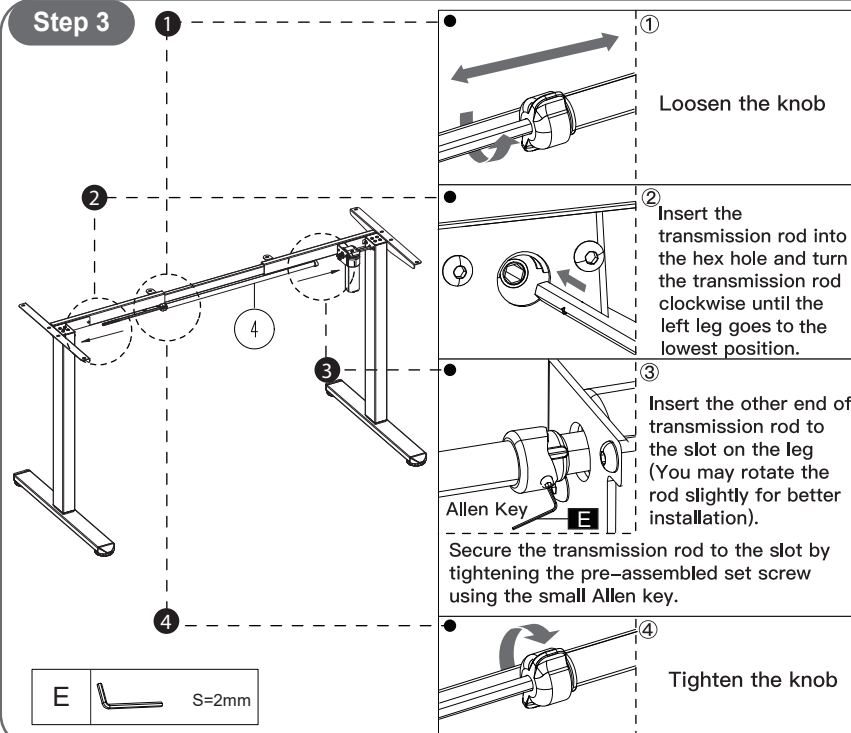

E	S=2mm
---	-------