


Controller Introduction

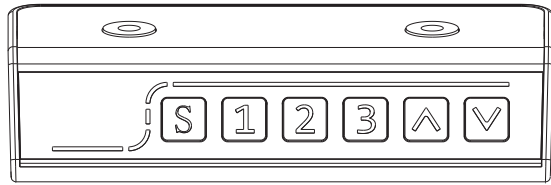

Short press the button, the display flashes, Press any of memory key to save the height.



Memory button: Press the 1 2 3 button and the desk will move to the height that was previously set for the button.



Press the button to raise the desk. Releasing the button stops the process. The maximum height of the desk is 118 cm.



Press the button to lower the desk. Releasing the button stops the process. The minimum height of the desk is 72 cm.

Reset

Press and hold the down arrow button for 5 seconds, and the screen will show 'RES.' Continue holding until the desk goes down to its lowest level and comes back up slightly.

Protection Mode Error Codes

Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.
E10	Sensor malfunction warning: Motor safety sensor cannot be detected. Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E20	Overloading Warning: Over the max of loading weight. Power off, take the things off the desk, power back on, and try again.
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline is detected. If this detection is incorrect, follow the reset instructions before continuing use.
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.
E60	Unequal Leg Height Warning: Check whether all the legs are at the same height. If necessary, adjust it by following the reset instructions.
-	Cable Disconnection Warning: Please power off, unplug the cables of the controller, wait for 5 minutes, then plug in the cables and connect the power again, and perform RES settings again.

Engineering Mode

ChangeDisplayed Unit(Un)	Long press the S button, "S--" shows and flashes. Press S again and the display shows "Un". Press 1 to select. Press up or down to switch between "SI" (metric) or "In" (imperial). Press S to save your choice.
CollisionForce Detection(CF)	Long press the S button, "S--" shows and flashes. Press S again and the display shows "Un". Press up or down to switch to "CF". Press 1 to select. Press up or down to switch between "OFF", "Low(L)", "Normal (n)" or "Heavy (H)" collision force detection. Press S to save your choice.

Desk Assembly Instruction



Gaming Table - AGR Lite



Power Input
100V-240V



Speed
20 mm/s



Motion Noise
<55dB



Load Capability
154 lbs / 70 kg



Overload
Protection



Operation Temperature
-20°C--+50°C










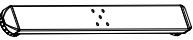
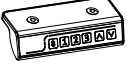
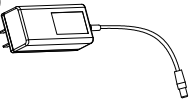
Thermal
Protection

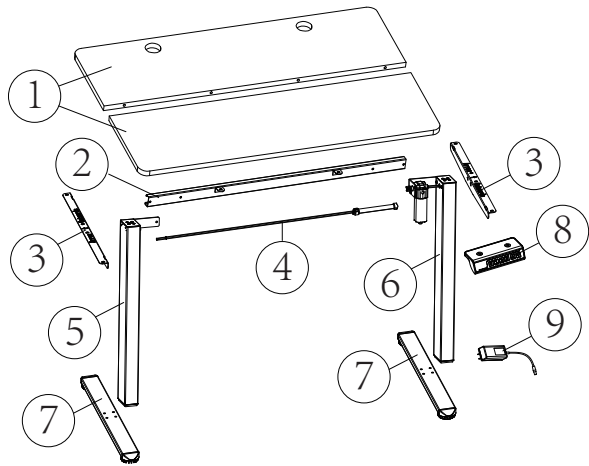

IP Grade
IP20



COMPONENT LIST

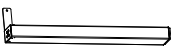



 <p>1 Desktop (x1)</p>	 <p>2 Crossbar (x1)</p>	 <p>3 Side Plate (x2)</p>
 <p>4 Transmission rod (x1)</p>	 <p>5 Left Table Leg (x1)</p>	 <p>6 Right Table Leg (x1)</p>
 <p>7 Leg Base (x2)</p>	 <p>8 Controller (x1)</p>	 <p>9 Power (x1)</p>

Step 5


I  Cable Clip (x2)

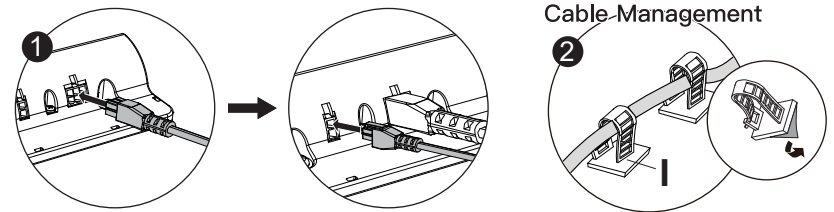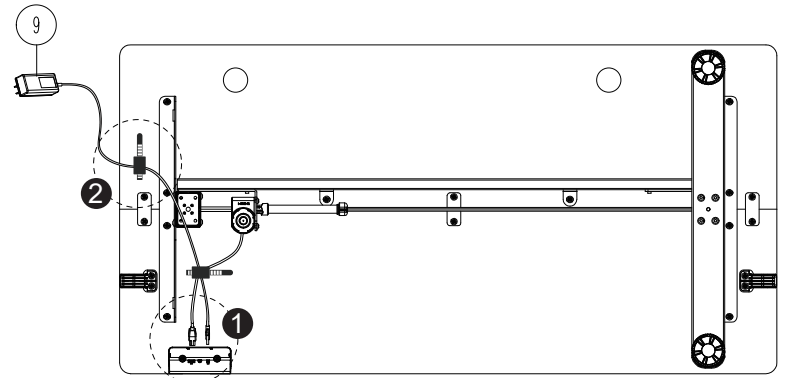
 



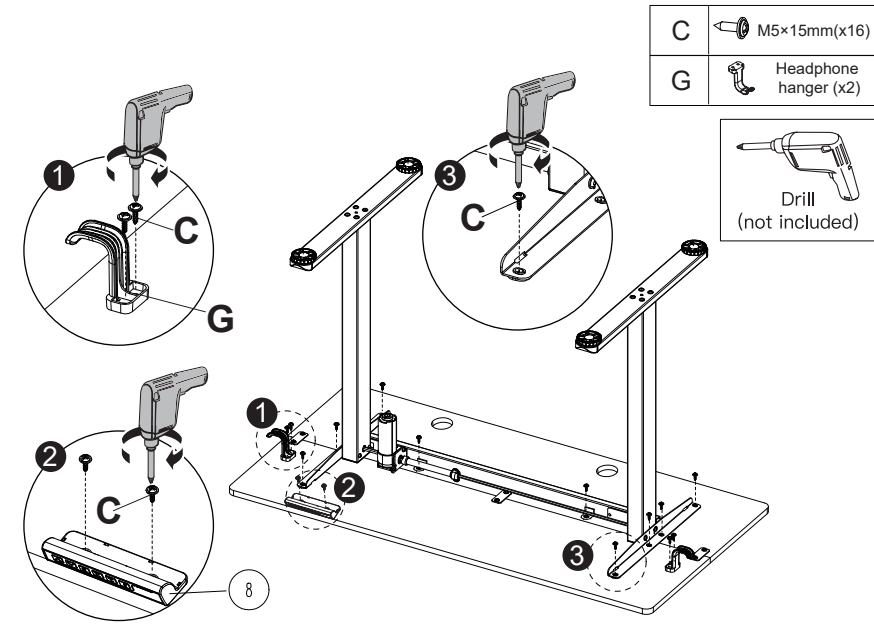
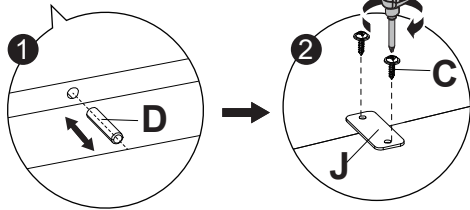
H  Cable Hole Cover (x2)

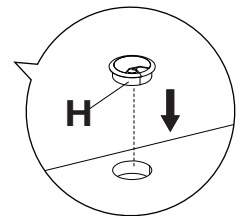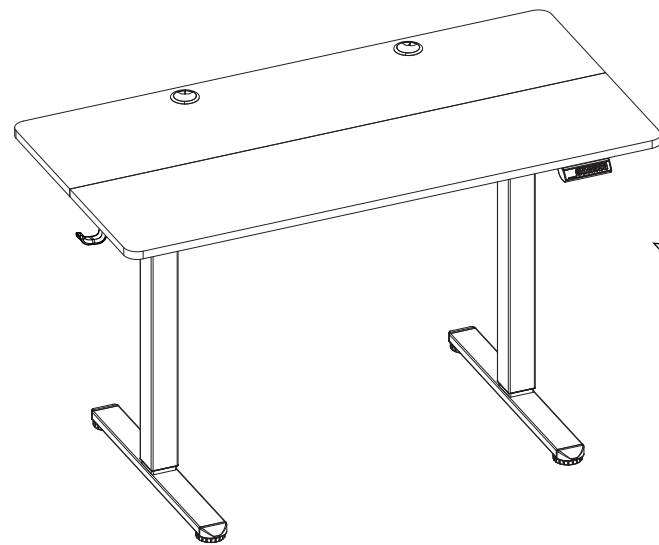

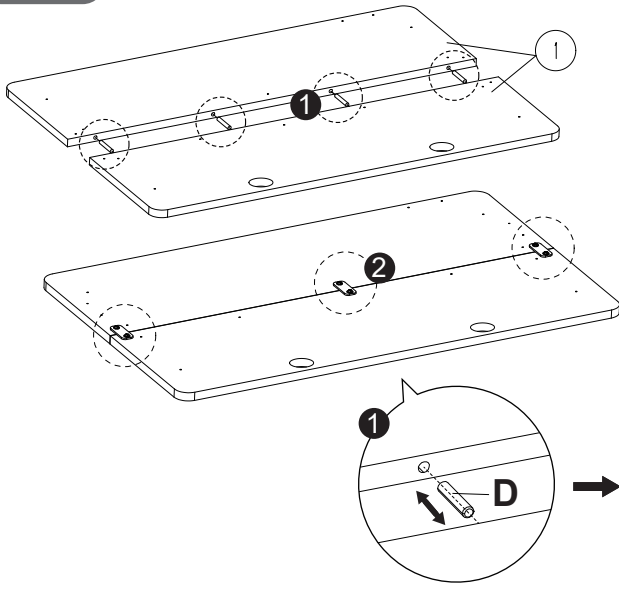

Step 4





 
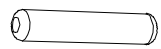






- C  M5×15mm(x6)
- D  Wood Tip (x4)
- J  Tabletop Connector (x3)



 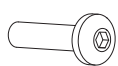



- C  M5×15mm(x16)
- G  Headphone hanger (x2)

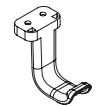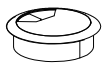



HARDWARE LIST


<p>A </p> <p>Screws M6×35mm (x8)</p>	<p>B </p> <p>Screws M6×8mm (x8)</p>	<p>C </p> <p>Screws M5×15mm (x22)</p>
<p>D </p> <p>Wood Tip (x4)</p>	<p>E </p> <p>Allen Key S=2mm (x1)</p>	<p>F </p> <p>Allen Key S=5mm (x1)</p>
<p>G </p> <p>Headphone hanger (x2)</p>	<p>H </p> <p>Cable Hole Cover (x2)</p>	<p>I </p> <p>Cable Clip (x2)</p>
<p>J </p> <p>Tabletop Connector (x3)</p>		

Spare Parts



<p>A </p> <p>M6×35mm (x1)</p>	<p>B </p> <p>M6×8mm (x2)</p>	<p>C </p> <p>M5×15mm (x2)</p>	<p>D </p> <p>Wood Tip (x2)</p>
---	--	---	--


Step 1

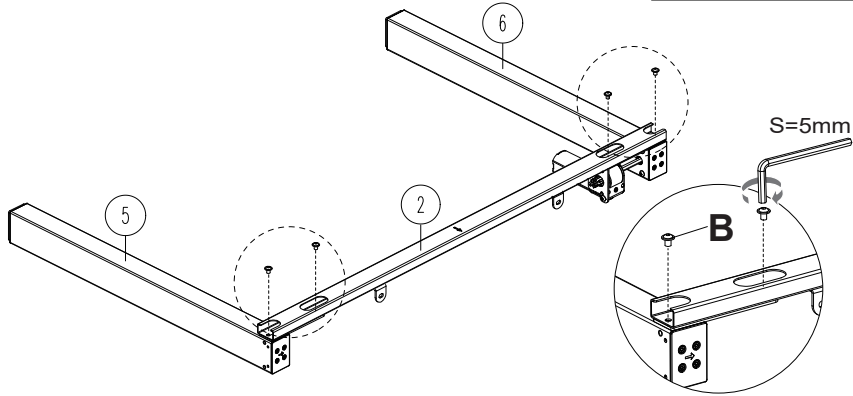

B	 M6×8mm(x4)
F	 S=5mm




Step 2

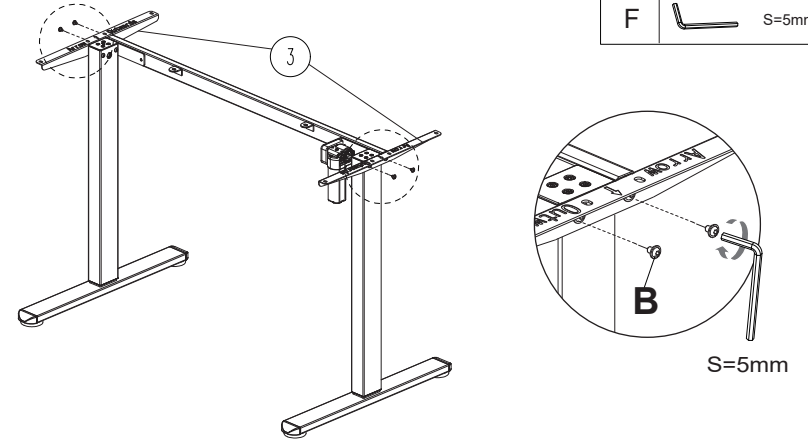
B	 M6×8mm(x4)
F	 S=5mm








A	 M6×35mm(x8)
F	 S=5mm

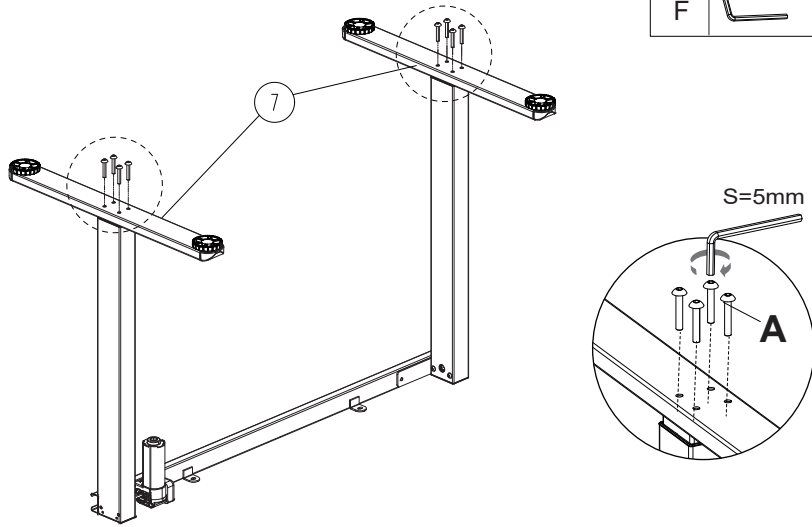

Step 3

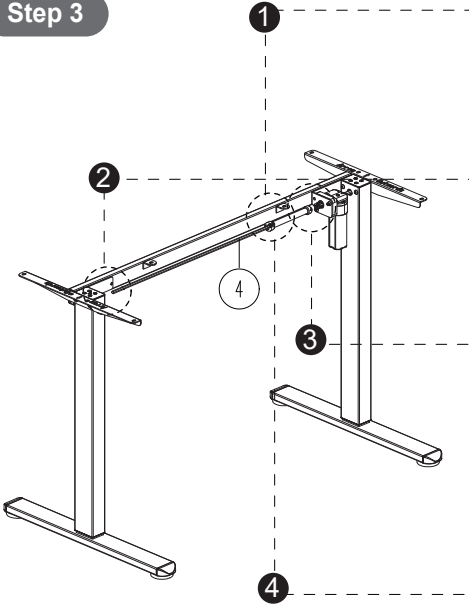
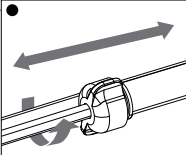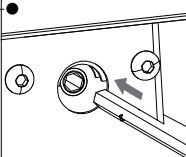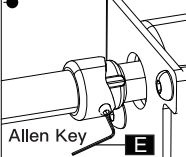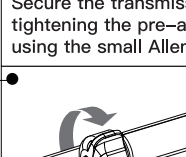
<p>1</p>	 <p>Loosen the knob</p>
<p>2</p>	 <p>2 Insert the transmission rod into the hex hole and turn the transmission rod clockwise until the left leg goes to the lowest position.</p>
<p>3</p>	 <p>3 Insert the other end of transmission rod to the slot on the leg (You may rotate the rod slightly for better installation).</p>
<p>4</p>	 <p>Secure the transmission rod to the slot by tightening the pre-assembled set screw using the small Allen key.</p> <p>4 Tighten the knob</p>

E		S=2mm
---	---	-------