



6


VESA Swivel Adjustment

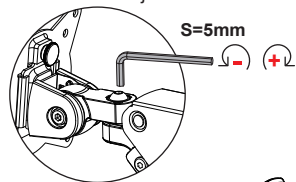

VESA Tilt Adjustment

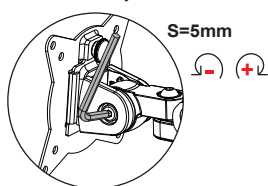


Arm Swivel Adjustment

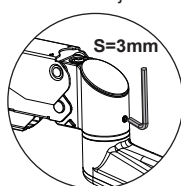

S=3mm
S=5mm
E



Tighten the bolt with the Allen Key to make the tilt and swivel adjustment.

7

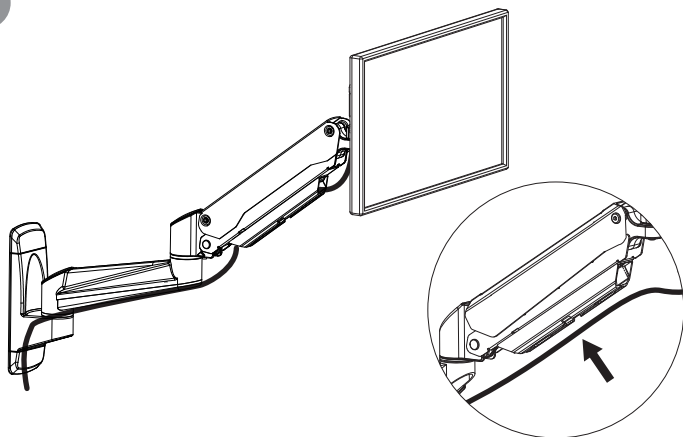

Route the cables along the mounting arms.
Leave enough slack of cables at arm joints for full adjustment.


DEVO

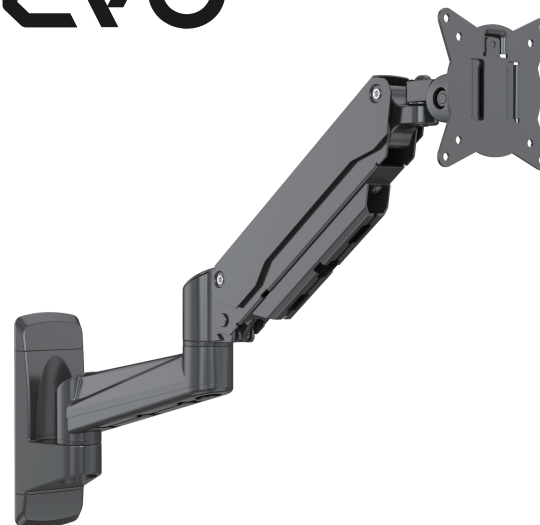

15° - 32°



0-8kgs/0-17.6lbs




75x75, 100x100



-90°/+85°



180°



360°


Installation

INSTRUCTIONS

3

OPTION A: For Flat Back Monitor

Flat surface installation: Install 4 short screws through faceplate to monitor via mounting holes. Do not tighten the screws excessively or your monitor might be damaged.

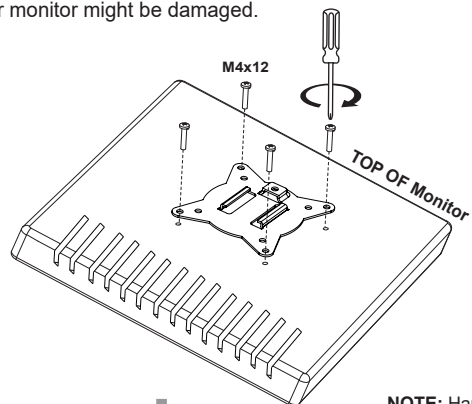

M4x12
M4x25
M4x30

A

12X5.8X16

A




NOTE: Hand tighten screws to avoid over tightening.

OR

OPTION B: For Recessed/Curved Back Monitor

Recessed/Curved surface installation: Put 4 spacers between faceplate and monitor. Install 4 long screws through faceplate, spacers to monitor via mounting holes. Do not tighten the screws excessively or your monitor might be damaged.

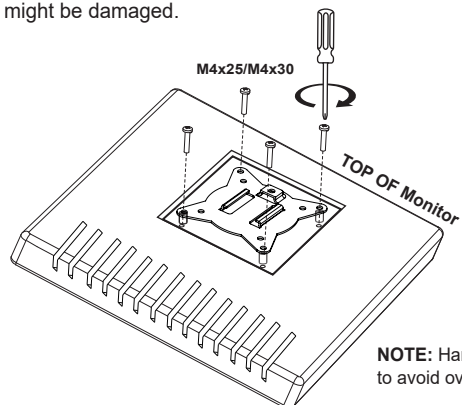


M4x25/M4x30









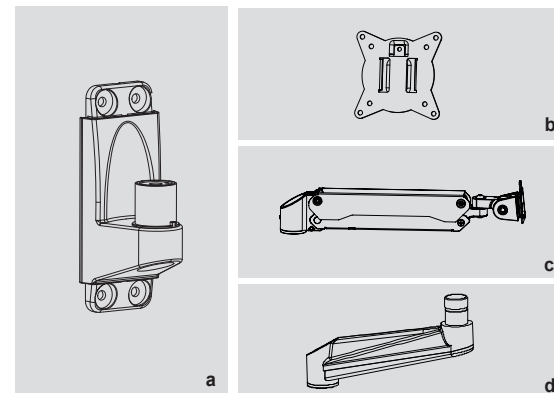




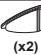

NOTE: Hand tighten screws to avoid over tightening.

TOOLS REQUIRED NOT INCLUDED



PARTS INCLUDED




A	 M4x12 (x4)	 M4x25 (x4)	 M4x30 (x4)	 12X5.8X16 (x4)
B	 M4x5 (x1)	 M5x6 (x3)		
C	 M8x60 (x4)	 Φ17x8.4x1.2(x4)	 Φ10x50 (x4)	
D	 (x1)			
E	 S=3mm (x1)	 S=5mm (x1)		
F	 (x1)	 (x2)		
G	 (x1)			


1




Wood Installation

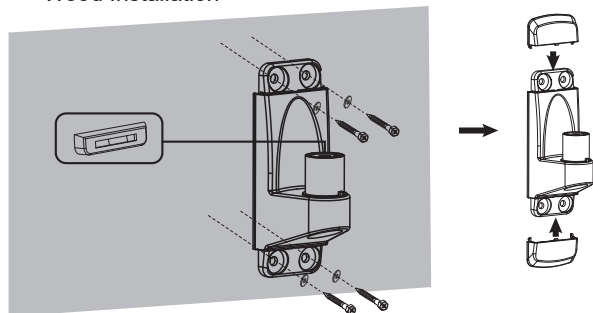

OR



Cement Installation

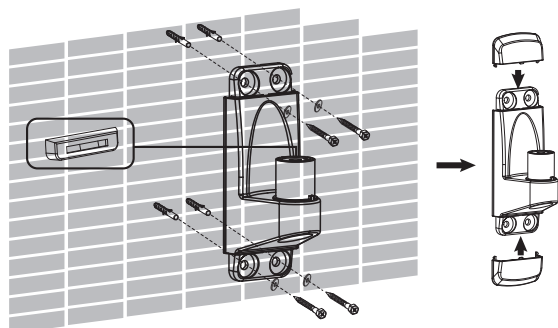

M8x60
17x8.4x1.2

C



F



D

M8x60
17x8.4x1.2
Φ10x50

C




F




D

2

Insert the decorative covers

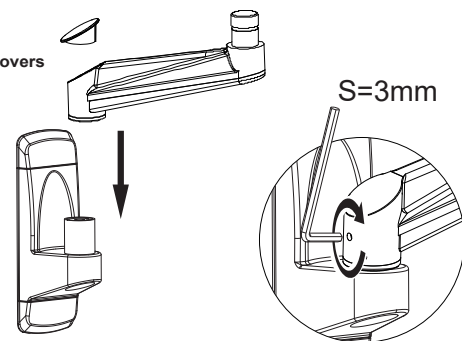

Insert the decorative covers

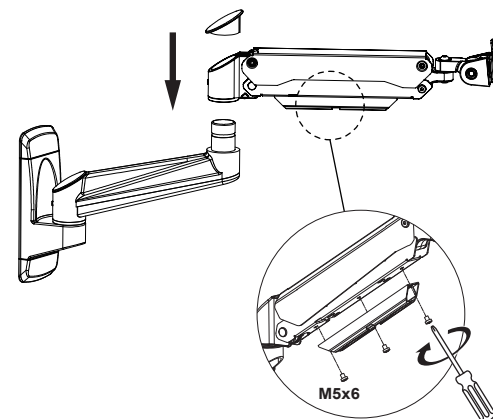

Cable Management Installation



F



S=3mm

E



M5x6

B



G



Use a pencil to mark where you will install the mounting base on the wall. Make sure the wall structure can support the weight of the monitors as well as the mount. Also make sure to avoid electrical wiring when choosing where to create mounting holes.

Insert the extension arm to the wall plate and fasten the screw in the back. Insert the gas spring arm above the extension arm.